

GOVERNMENT GROUP INDEX

01 ENGINE GROUP

- 0100 Engine Assembly
- 0101 Crankcase and Cylinder Block
- 0101A Cylinder Head
- 0102 Crankshaft
- 0102A Crankshaft Bearing
- 0103 Pistons
- 0103A Rings
- 0103B Piston Pins
- 0104 Connecting Rods
- 0104A Connecting Rod Bearings
- 0105 Valves, Seats, Guides and Spring
- 0105A Tappets
- 0105C Valve Covers and Gaskets
- 0106 Camshaft
- 0106A Camshaft Bearings
- 0106C Chains and Sprockets
- 0106D Chain Case Cover
- 0107 Oil Pump
- 0107A Oil Pan
- 0107A-1 Oil Float
- 0107E Oil Filter
- 0107F Oil Filter Attaching Parts
- 0107G Oil Filler
- 0107H Level and/or Float Gauges
- 0107J Oil Distribution System
- 0107N Crankcase Ventilator
- 0108 Manifolds as an Assembly
- 0108A Intake Manifold
- 0108B Exhaust Manifold
- 0108C Heat Controls
- 0109 Flywheel
- 0109B Ring Gear
- 0109C Flywheel Housing
- 0110 Mountings

02 CLUTCH GROUP

- 0201A Facings and Rivets
- 0201B Clutch Driven Plate
- 0202 Cover, Pressure Plates, and Springs
- 0203 Release Yoke, Bearing Fork
- 0204 Pedal
- 0204A Pedal Linkage

03 FUEL GROUP

- 0300 Fuel Tanks
- 0300A Tank Gauge Unit
- 0301 Carburetor
- 0301A Carburetor Attaching Parts
- 0301B Choke
- 0301C Air Cleaner
- 0302 Fuel Pump
- 0302A Attaching Parts
- 0303 Accelerator and Linkage

- 0303A Hand Throttle and Linkage
- 0304 Fuel Lines
- 0306B Fuel Strainer

04 EXHAUST GROUP

- 0401 Muffler
- 0402 Exhaust Pipe

05 COOLING GROUP

- 0501 Radiator
- 0502 Thermostat
- 0503 Water Pump
- 0503A Fan and Pulleys
- 0503B Fan Belt

06 ELECTRICAL GROUP

- 0601 Generator
- 0601A Generator Attaching Parts
- 0601B Generator Regulator
- 0602 Cranking Motor
- 0603 Distributor
- 0604 Ignition Coil
- 0604A Ignition Wiring
- 0604B Spark Plugs
- 0604C Ignition Lock
- 0605 Instruments
- 0605B Instrument Wiring
- 0605C Panel Light
- 0606 Switches
- 0606B Chassis Wiring
- 0606D Circuit Breakers
- 0606E Junction Blocks
- 0606F Trailer Electric Coupling
- 0607 Head Lights
- 0607A Sealed Beam
- 0607B Lamps
- 0607D Blackout Lights
- 0608 Tail Light
- 0609 Horns
- 0609B Horn Button and Wiring
- 0610 Battery
- 0610A Battery Hangers

07 TRANSMISSION GROUP

- 0700 Transmission Assembly
- 0701 Case
- 0703 Main Drive Gear and Bearings
- 0704 Main Shaft and Bearings
- 0704B Gears
- 0704C Countershaft and Reverse Idler Shaft
- 0706A Gear Shift Lever and Parts
- 0706B Gearshifter Rails and Parts
- 0706C Gearshifter Yokes or Forks

GOVERNMENT GROUP INDEX—Cont'd

08 TRANSMISSION TRANSFER ASSEMBLY

- 0800 Transmission Transfer Assembly
- 0801 Case
- 0802 Drive Gear
- 0803 Driven Gears, Shafts, Bearings
- 0804 Idler Gear, Shaft, Bearings
- 0805 Shifter Rods
- 0805A Yokes
- 0805B Shift Lever and Parts
- 0809 Mountings
- 0810 Speedometer Drive Gears

09 PROPELLER SHAFT AND UNIVERSAL JOINT

- 0901 Propeller Shaft Assemblies
- 0902 Universal Joints

10 FRONT AXLE GROUP

- 1000 Front Axle Assembly
- 1001 Housing
- 1002 Differential Assembly
- 1003 Differential Gears, Pinion and Bearing
- 1006 Steering Knuckle, Flange and Arm
- 1007 Axle Shaft, Universal Joints

11 REAR AXLE GROUP

- 1100 Rear Axle Assembly
- 1101 Housing Assembly
- 1102 Axle Drive Shafts
- 1103 Differential and Carrier Assembly
- 1104 Differential Pinion Bearing

12 BRAKE GROUP

- 1200 Brake Assembly
- 1201 Hand Brake Emergency Brake Parts
- 1202 Shoes and Facings
- 1203 Brake Shoe Support
- 1203A Guide Springs
- 1203B Adjusting Pin and Anchor Plate
- 1204 Pedal and Spring
- 1205 Master Cylinder
- 1207 Wheel Cylinders
- 1209B Hoses
- 1209C Tubes and Clips

13 WHEELS, HUBS AND DRUMS GROUP

- 1301 Wheel Assembly
- 1301A Bearings
- 1301B Seals
- 1301C Retainers

- 1302 Hubs and Drums
- 1302A Studs and Bolts

14 STEERING GROUP

- 1401 Steering Connecting Rod
- 1402 Tie Rod
- 1403A Gear Assembly
- 1404 Wheel Assembly
- 1405 Brackets

15 FRAME & BRACKETS GROUP

- 1500 Frame and Brackets
- 1502 Pintle Hook
- 1505 Spare Wheel

16 SPRINGS AND SHOCK ABSORBER GROUP

- 1601 Front Spring
- 1601A Rear Springs
- 1601B Spring Bumpers
- 1601C Torque Reaction Spring
- 1602 Shackle and Spring Attaching Parts
- 1603 Shock Absorbers and Mountings

17 HOOD, FENDERS, APRONS GROUP

- 1701 Fenders
- 1702 Splash Apron
- 1704 Hood

18 BODY GROUP

- 1800 Body
- 1800A Body Handles
- 1801 Body Mounting Parts
- 1802 Body Pillars
- 1802A Body Panels
- 1803 Floor Mats and Seals
- 1804 Seat
- 1804A Cushions
- 1809 Instrument Panel and Mounting Parts
- 1809A Compartment and Parts
- 1811 Windshield Assembly
- 1811A Windshield Glass
- 1811B Windshield Frame, Moulding and Seals
- 1811D Windshield Wiper Arm and Blades
- 1817 Tool Box
- 1817A Spare Gas Carrier

21 BUMPERS AND GUARD GROUP

- 2101 Bumpers
- 2103 Radiator Guards
- 2103A Lamp Guards

GOVERNMENT GROUP INDEX—Cont'd

22 MISCELLANEOUS BODY CHASSIS AND ACCESSORY GROUP

- 2201 Tarpaulins
- 2201A Bows
- 2201F Side Curtains
- 2202 Rear View Mirrors
- 2203 Identification and Caution Plates
- 2203A Reflectors
- 2204 Speedometer and Parts

23 GENERAL USE STANDARDIZED PARTS GROUP

- 2301 Tools
- 2301A Pioneering Equipment
- 2301B Tire Chains
- 2302 Brake Fluid
- 2304B Bolts
- 2304C Chains
- 2304D Clamps Hose

- 2304E Elbows
- 2304F Fittings
- 2304G Nuts
- 2304H Pins
- 2304Y Plugs
- 2304J Rivets
- 2304K Screws
- 2304L Washers
- 2304M Wire Locking
- 2305 Miscellaneous Cotter Keys
- 2305A Woodruff Keys
- 2310 Winterization Kits

24 FIRE EXTINGUISHER SYSTEM GROUP

- 2402 Portable System and Parts

26 RADIO GROUP

- 2601 Radio Installation Parts
- 2603 Radio Suppression System Parts

Diesel-Elektrik
Tacke & Co.
Stromerzeugungsanlagen
Hamburg-Stellingen
Tiedemannstraße 15/17
Telefon: 40 92 41/42